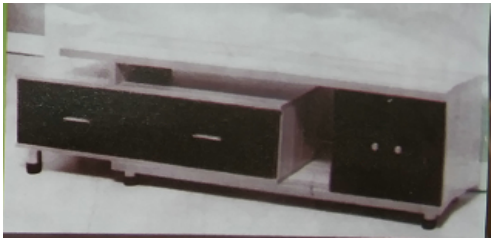
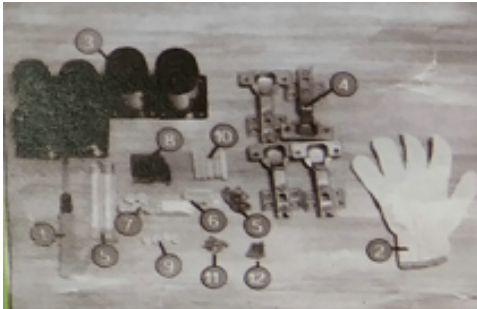
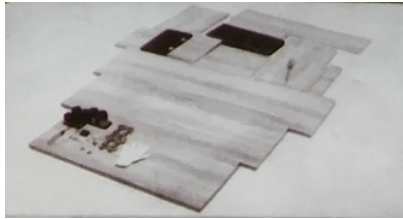
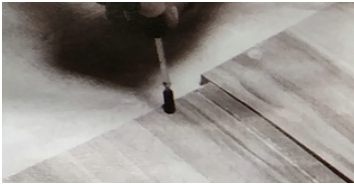

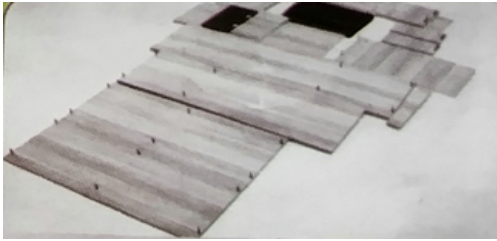
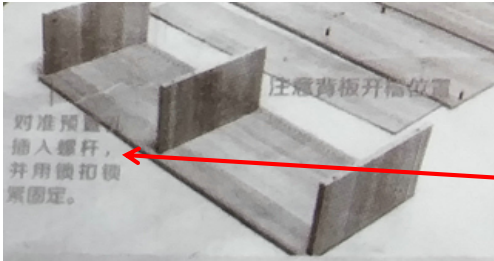



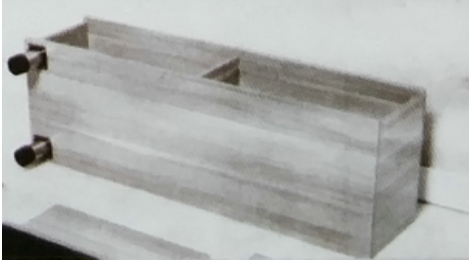
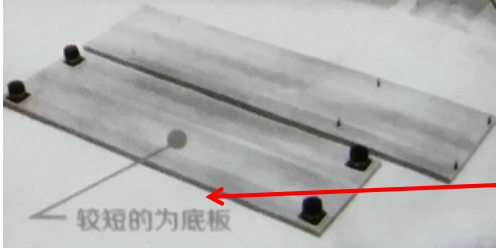
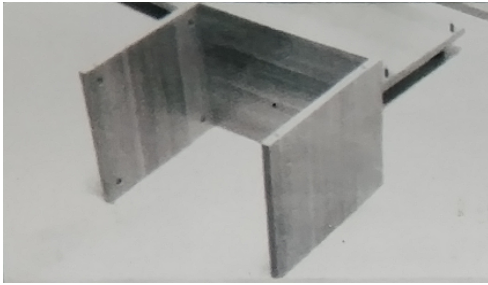
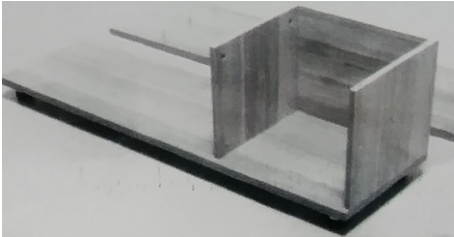
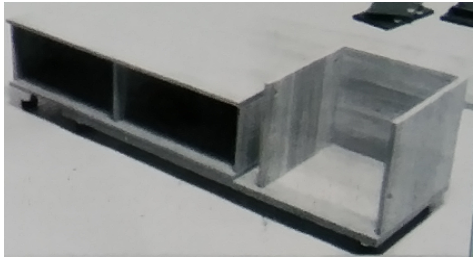

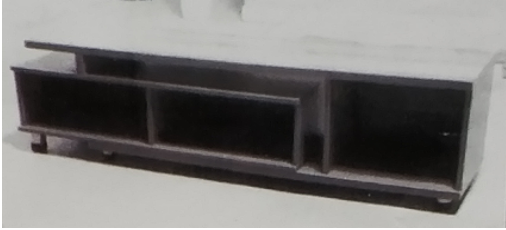
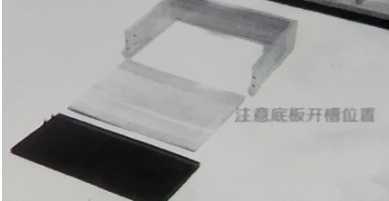
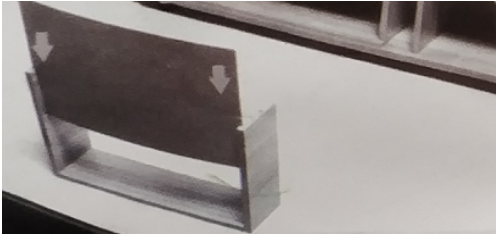
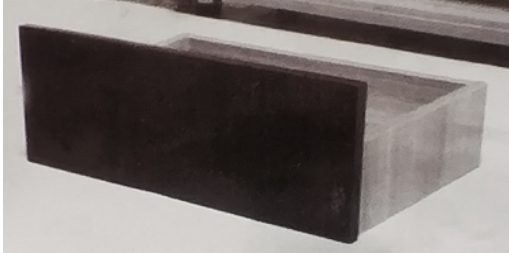
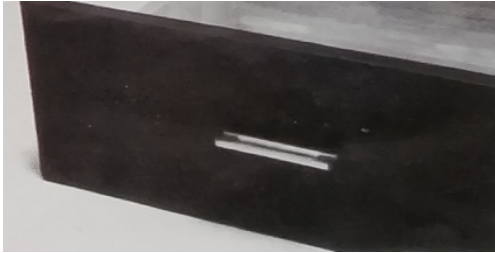
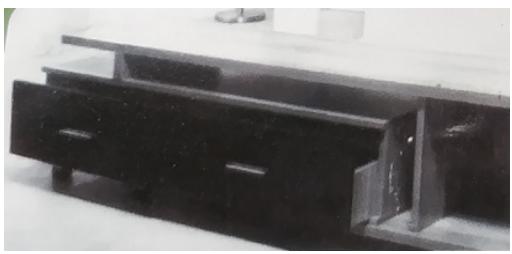
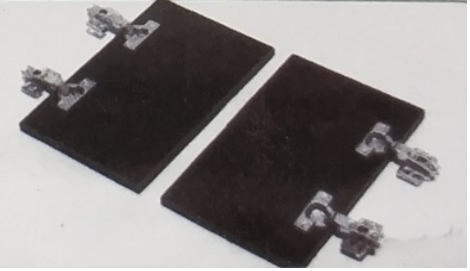
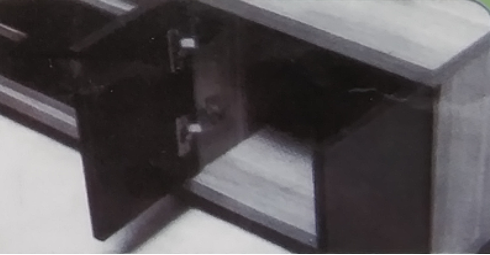

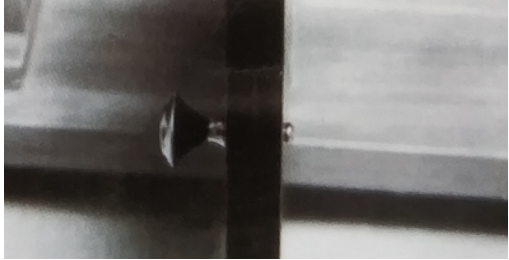
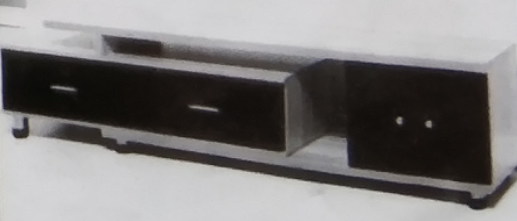


1#		Drawing for TV Stand
2#		<p>1. Screwdriver 2. Cabinet Leg 3. Door Hinge 4. Handle 5. Magnetic Door Stopper 6. Triple piece: lock 7. Triple piece: screw 8. Triple piece: pre-embedded 9. Fixed wooden plug 10. Self-tapping screw 11. Long bar screw</p>
3#		Arrange the plate components and confirm the corresponding position of each component
4#		Knock in the embedded part according to the preset hole and screw it into the screw
5#		Knock in the fixed link cork according to the preset hole
6#		As shown in the picture, install all the screws and wooden plugs
7#		<p>As shown in the figure, connect the three vertical plates and the bottom plate of the mobile cabinet first.</p> <p>Insert the screw into the preset hole and lock it with the lock.</p>

8#		<p>Insert the backplane along the slot, pay attention to even force on both sides</p>
9#		<p>Install the upper panel of the mobile cabinet at the corresponding position</p>
10#		<p>Turn the cabinet over and use self-tapping screws to fix the two cabinet legs on the bottom plate</p>
11#		<p>The installation of the main body of the mobile cabinet is completed, and it is temporarily placed aside</p>
12#		<p>Find the upper and lower panels of the motherboard frame, and install four cabinet legs on the bottom plate</p> <p>The short one is the bottom plate</p>
13#		<p>First assemble the three side panels of the side cabinet</p>
14#		<p>Install the assembled three facades on the base plate according to the preset hole position</p>

15#		Put the rented mobile cabinet on the main frame as shown in the figure
16#		Corresponding to the preset holes, assemble the small board to the upper board.
17#		Assemble the assembled upper panel to the subject frame
18#		Find the drawer assembly, and assemble the three side panels first, paying attention to the position of the slot on the bottom panel.
19#		Insert the backplane along the slot, pay attention to even force on both sides
20#		Install the drawer panel, pay attention to the seam of the bottom plate slot during the process, and fasten both sides
21#		Corresponding to the preset hole, use screws to fix the drawer handle

22#		Repeat steps 18# - 21# to complete the installation of the two drawers
23#		In the corresponding position, use self-tapping screws to install the door hinge on the cabinet door.
24#		Use self-tapping screws to fix the cabinet door, and need to fine-tune the door hinge positioning during the process
25#		Open and close the cabinet door to determine the position of the door stopper and fix it with self-tapping screws.
26#		Secure cabinet door handles with long shank screws through pre-set holes
27#		After adjusting the height of the cabinet legs to ensure stability, all installation is completed.